

DashCommand™ Wi-Fi Setup Guide

STEP 1

Connect the OBD-II Cable to your vehicle's OBD-II Port.

STEP 2

Go to Settings on your iPhone, iPod Touch, or iPad.



STEP 3


Go into the Wi-Fi settings.



STEP 4

Turn on Wi-Fi and connect to the network created by your WiFi interface. The Kiwi WiFi creates a network named PLXDevices, and the OBDLink WiFi creates a network named ScanTool.net. Contact your hardware manufacturer if you can't find the correct network.


If you are ***not*** using a Kiwi WiFi, you're done with this step. Go to step 5.

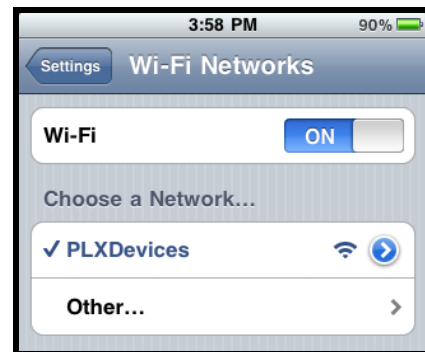

If you do have a Kiwi WiFi, select the PLXDevices network, and tap the blue arrow.

Select Static IP Address, and enter this information:

IP Address	192.168.0.11
Subnet Mask	255.255.255.0
Router	192.168.0.10

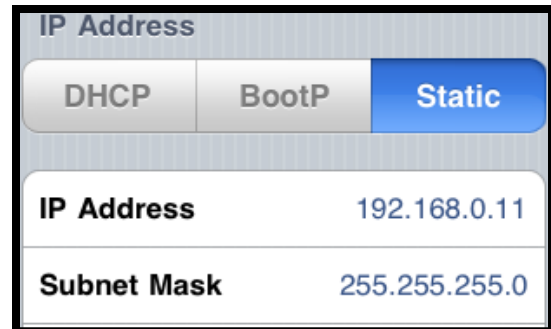

STEP 5

Run DashCommand™!

